

UXIME/ UXTM Config. Version	UXIME FW	ELS2 contro ller	ELS2 sensor	UXIM FW (discontinue d)	UXTM FW	UXIM/ UXTM Xport	Notes
1.05.00				1.00.00	1.13.00	3.10.00	First Release
1.05.00				1.0.00	1.14.01	3.10.00	
1.05.00				1.01.00	1.14.01	3.10.00	
1.05.00				1.02.00	1.14.01	3.10.00	
1.06.00				1.03.00	1.14.01	3.24.00	Ambient Temp.
1.07.00				1.03.00	1.20.00	3.24.00	Start up report
1.09.00				1.05.00 and 1.06.00	1.22.00 and 1.23.00	3.33.00	
1.11.00				1.06.00	1.25.00	3.33.00	
1.11.00 1.12.01				1.08.04	1.25.00	3.33.00	
1.15.2.1				1.11.1	1.28.14	3.38.0	
UXIME-ELS2 integrated config tool / UXIME-UXTM configurator tool							
1.24.0.1	2.4.1	1.0.1.22	1.0.1.14	1.13.3	1.31.1	3.38.0	1. UXIME-ELSi2 integration through RS-485(2) is now supported over Alber proprietary protocol 2. UXIME-ELSi2 integrated reporting feature is now available 3. In UXIME reports, the ambient temperature value is now correctly displayed, and ground fault measurement units are now in kohms 4. Individual High cell resistance thresholds are now supported 5. Resistance test start time trigger added 6. Resistance test is now supported in day of the week, day of the month and an absolute day interval for UXTM devices 7. Digital input alarm name change is now reflected on the alarms table